

## AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS



- Carefully read these “instructions” for safe and correct use of the air-conditioner.
- Carefully keep the “instructions” manual as it can be referred to at any time.

11326032000156

# CONTENTS

Buttons description-----	1
Usage-----	3
Fix batteries -----	3
Attention -----	4

# Usage


## Attention

1. Aim the remote control towards the receiver on the air conditioner.
2. The remote control should be within 8 meters away from the receiver.
3. No obstacles between the remote control and the receiver.
4. Do not drop or throw the remote control.
5. Do not put the remote control under the strong sun rays or heating devices and other heating sources as well.
6. Use the button battery (CR2032/3V).
7. Take the battery out of remote controller when you don't use it for a long time.
8. When the operation sound can not be heard indoor unit or the transmission symbol on the display screen does not flash, the battery need to be replaced.
9. If the reset phenomenon occurs when pressing the button of the remote control, the electrical quantity is deficient and the battery need to be replaced.
10. Waste batteries should be disposed of properly.

### Note:

- \* The picture is general remote controller, contains almost all of the function buttons. They may be slightly different from material object (depend on model).

# Buttons description

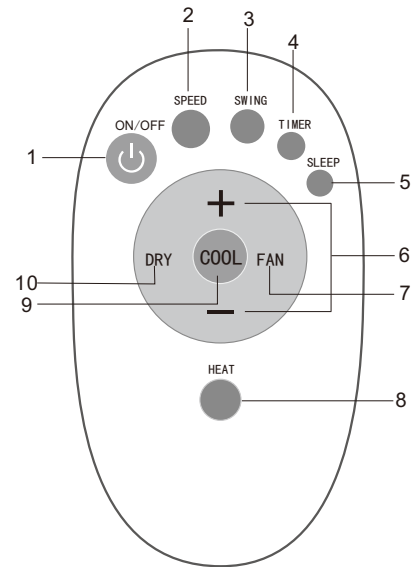

### 1. "ON/OFF" button

Press "ON/OFF" to turn on or off the air conditioner.

### 2. "SPEED" button

Press "SPEED" to set the wind speed (LOW, MID or HIGH).

### 3. "SWING" button

Press "SWING" to turn on or off the swing function.

### 4. "TIMER" button

- a. When the air conditioner is turned off, press "TIMER" to set a time to turn on the air conditioner. Press "+" or "-" to set the time, and press "TIMER" again to confirm it.
- b. When the air conditioner is turned on, press "TIMER" to set a time to turn off the air conditioner. Press "+" or "-" to set the time, and press "TIMER" again to confirm it.
- c. After setting the time, press "TIMER" again to cancel the set time.

## Buttons description

Note: After setting the time, press “TIMER” again to confirm it in 5 seconds. Without any operation in 5 seconds, the air conditioner will confirm the time automatically. Press “TIMER” after confirming the time will cancel the set time.

### 5. “SLEEP” button

- a. In operating mode, press “SLEEP” to enter the 10-hour intelligent sleep mode. After 10 hours, the air conditioner will exit the sleep mode and restore its previous mode.
- b. In sleep mode, press “SLEEP” again, or press “MODE” or “ON/OFF” to exit the sleep mode.

Note: The sleep mode cannot be started in ventilation mode.

### 6. “+” and “-” button

Press “+” and “-” to regulate the temperature (the unit is 1°C) and set the time (the unit is 1h). The temperature ranges from 16°C to 32°C, and the time ranges from 1h to 24h.

### 7. “FAN” button

Press “FAN” to start the Ventilation mode.

### 8. “HEAT” button

Press “HEAT” to start the heating mode.

### 9. “COOL” button

Press “COOL” to start the refrigeration mode.

### 10. “DRY” button

Press “DRY” to start the dehumidification mode.

Note: Only when temperature reaches 16°C can we turn on the dehumidification mode, besides, the drain pipe must be installed.

## Usage

### ★ Fix batteries

1. Slide to open the cover according to the direction indicated by the arrowhead.
2. Install the button battery (CR2032/3V). Make sure the positive pole faces up.
3. Put back the cover.

